

SD2 Firmware

There are two different configurations of the Anabat SD2 firmware available. One version is for SD2 units that are connected to the GML1 remote download system and the other is for standard SD2 units that are not connected to a GML1 system.

For instructions on how to install firmware onto the SD2, see the chapter “How to upgrade firmware” in the SD2 system manual.

SD2 connected to a GML

This firmware is for SD2 units that are connected to the GML remote download system. If you are using an SD2 with a GML1 remote download system then you need to install this firmware otherwise the system will not work.

It is not recommended that you use this firmware if your SD2 is not connected to a GML1 system.

SD2 not connected to a GML

This firmware is for normal active and passive use of the SD2 when it is not connected to a GML1 remote download system. This is the default configuration of firmware that comes with your SD2.